


Rhino Vault Door

Uncrating Instructions



After removal of crate top (removal of sides and ends optional); remove top protective foam pieces and plastic sheet and set aside. (Refer to Figure 1):

Figure 1.

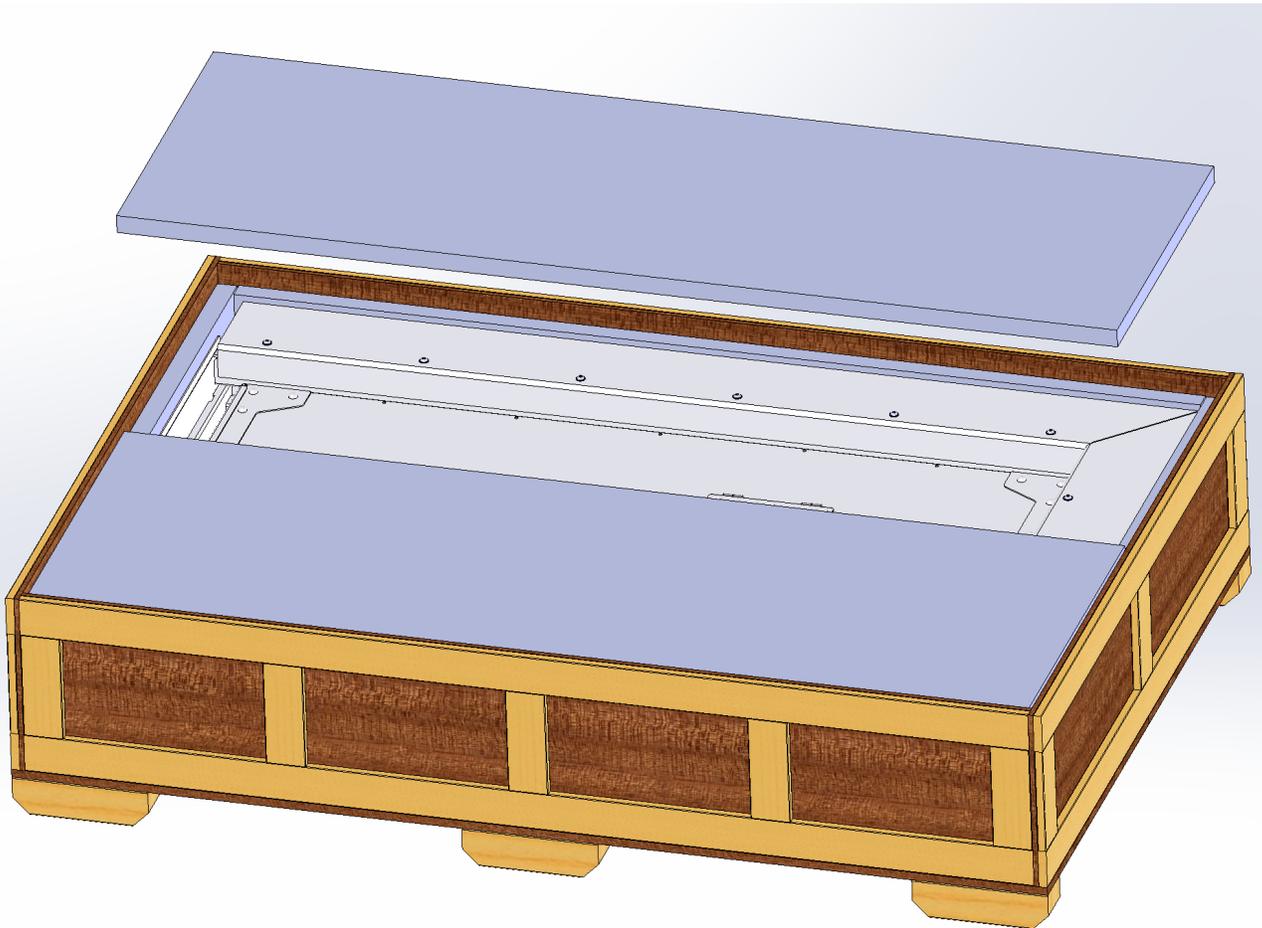



Remove all rear frame bolts using a 7/32" Allen wrench (number of bolts will vary with width of door). Save bolts for installation. (Refer to Figure 2):

Figure 2.

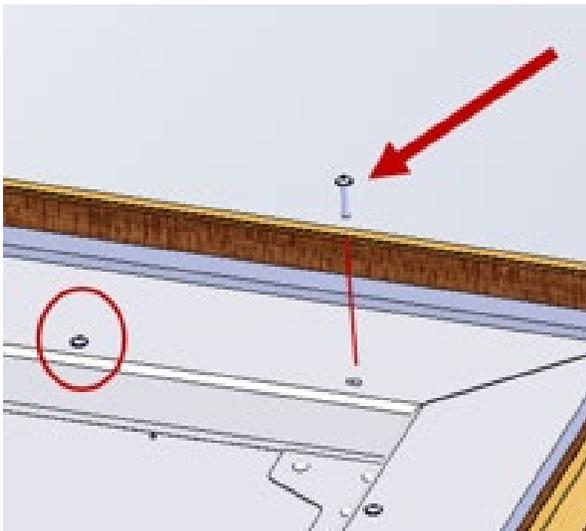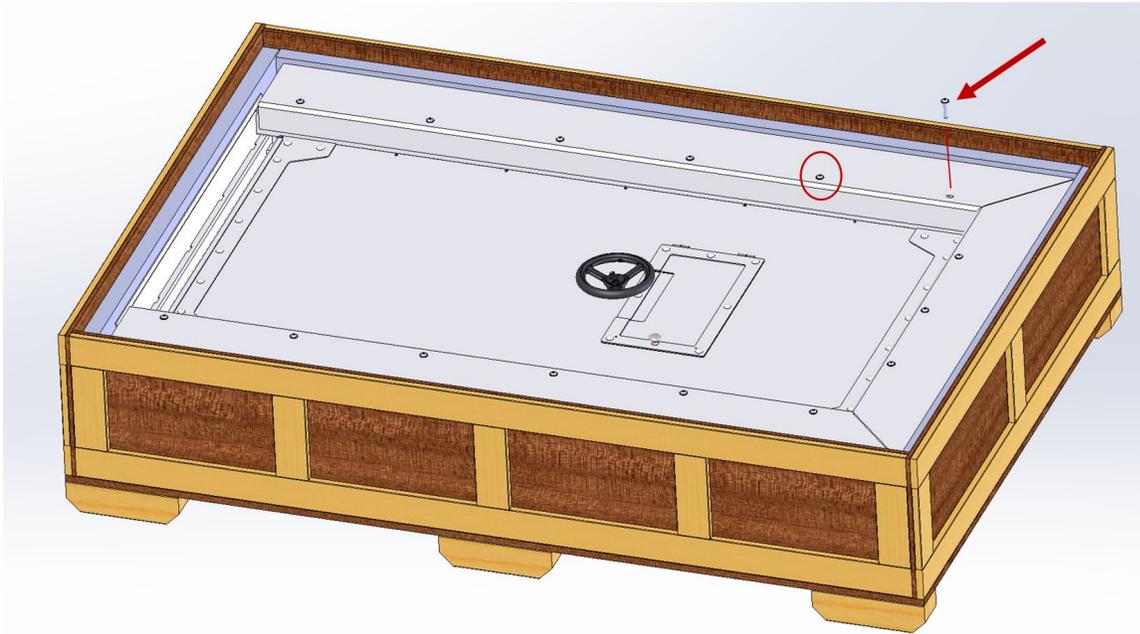



Lift rear frame from vault door and set aside, remove shipping spacers. (Refer to Figure 3):

Figure 3.

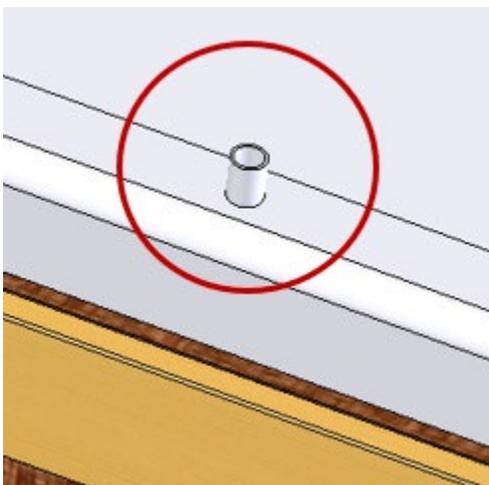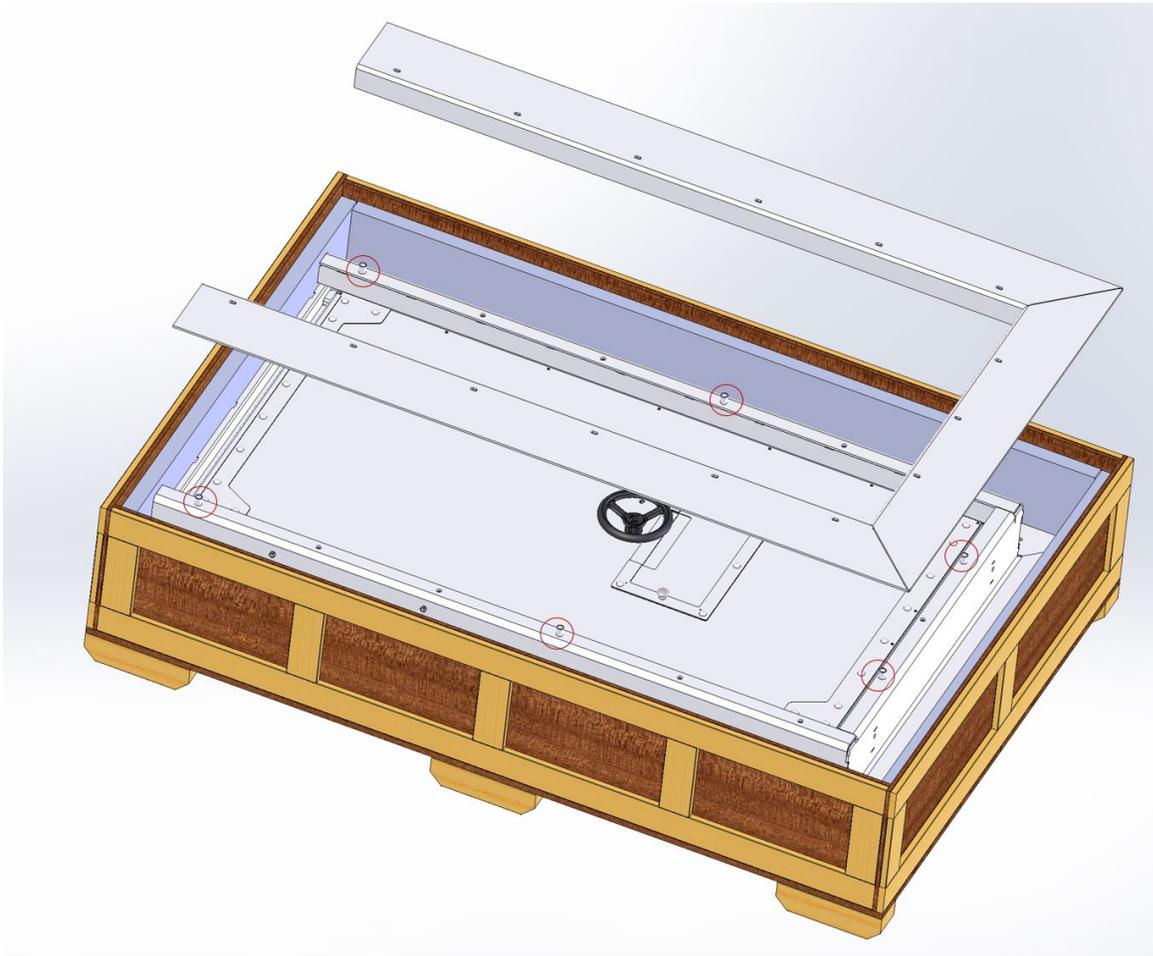

Install two high strength 3/8"-16 shouldered eyebolts (1200 pounds minimum capacity each) (not included) into weld nuts and tighten. (Refer to Figure 4):

Figure 4.

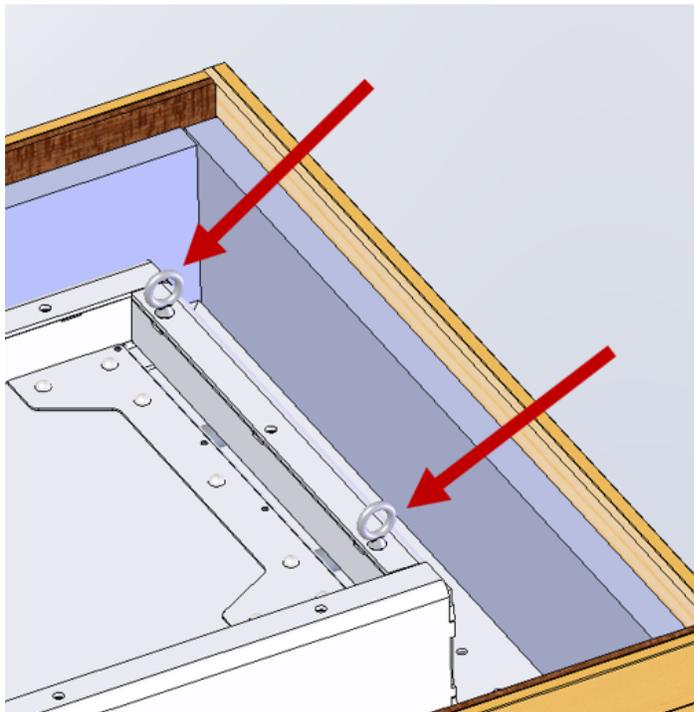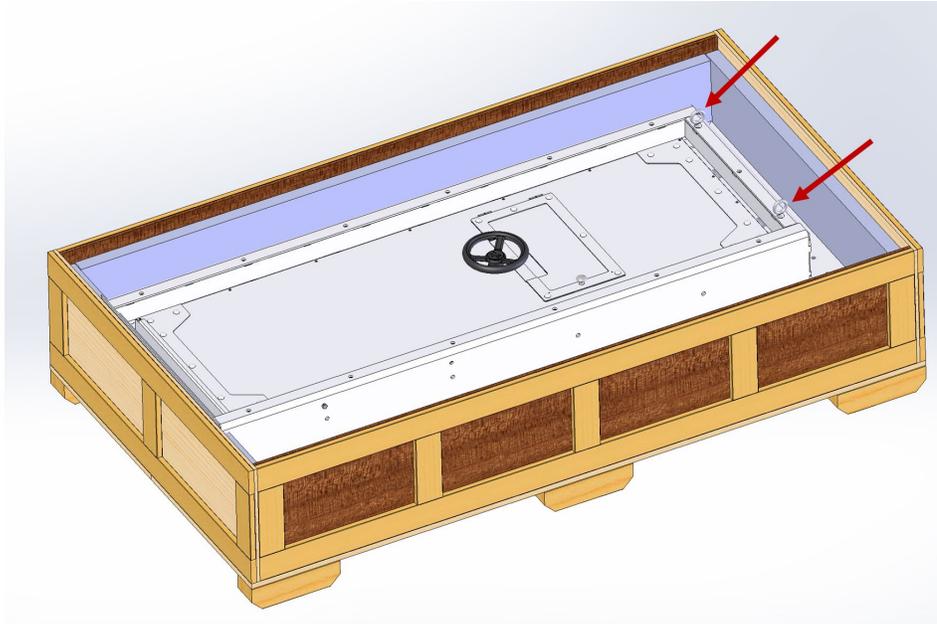

Attach two lifting straps or cables (1200 pounds minimum lifting capacity each) to eyebolts and lift vault door from shipping crate. (Refer to Figure 5):

Figure 5.

